



8 27 2018

Oil Change maintenance

First Service (break in) is a 15 hrs. Change Oil and filter

Change Engine oil and filter every 50 Hrs

- 15/50 Full Synthetic oil
- 2 ½ Quarts
- BRIGGS Filter part #842921

Transmission maintenance

Change every 100 hours, use the same engine oil

- 15/50 Full Synthetic oil
- 1.5 Oz (do not over fill)

*The first time you change it, it maybe thick and dark in color.

Lower Unit and Mid-Section Maintenance

Grease and check lower unit grease every 30 hrs or every 4 to 5 hunting or fishing trips. *MAKE SURE TO REMOVE ALLEN HEAD DRAIN PLUG BEFORE YOU PUMP GREASE*.

- Shchaeffer's Grease 238 Ultra Supreme Waterproof
- NIGI 2 or 3 (thickness)
- NEVER USE RED GREASE

Fuel maintenance

Run the Highest-octane fuel available or non-Ethanol

- 93 octane
- Run a stabilizer treatment when storing (Ex Stabil Marine)

